


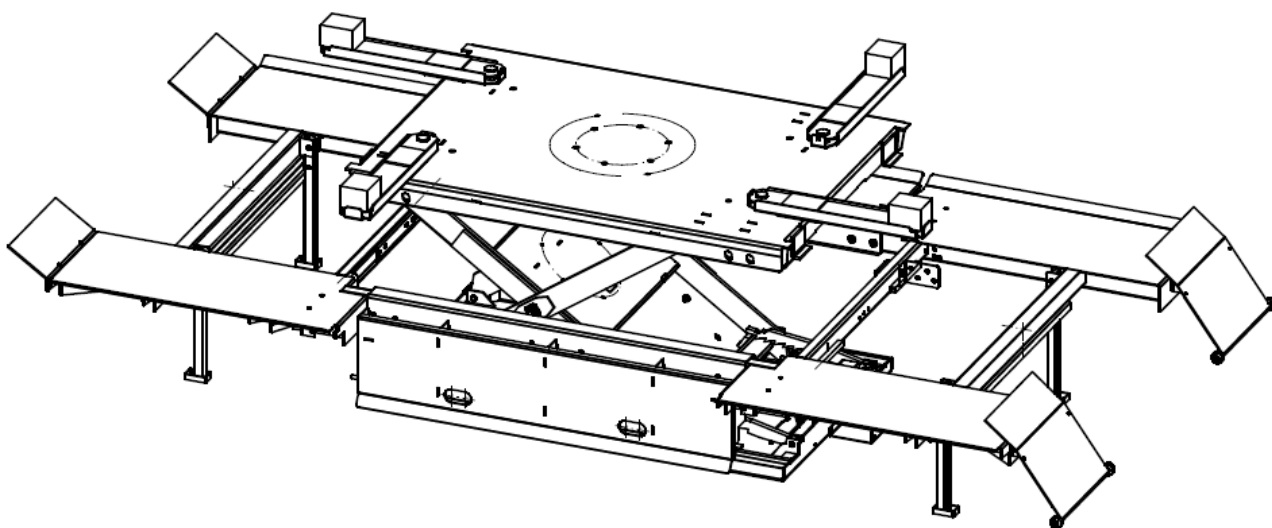

Operating Manual and Test Record for Service Lift

Machine type	Article No.	Serial No.
K1200-HLS-DUO-17	HLS1200-DUO-17	
K1200-HLS-DUO-18	HLS1200-DUO-18	



Herkules Hebetchnik GmbH
Miramstraße 68b
D-34123 Kassel
Tel.: +49 (0) 561/58907-0
Fax: +49 (0) 561/58907-34
Email: info.de@hedson.com
Internet: www.hedson.com



760-078_Manual_HLS1200-DUO-17-18_(TA)_2024.01_3.2_EN.docx
Translation from German Original

Table of contents

1	Operation and Safety Inspection.....	5
2	General information	6
2.1	Hazard warnings	6
2.2	Limitation of liability	6
2.3	Copyright.....	7
2.4	Terms of guarantee	7
2.5	Customer Service.....	7
3	Product description	8
3.1	Intended use	8
3.2	Product structure	9
3.3	Technical Data	10
3.4	Product designation.....	10
4	CE Declaration of Conformity	11
5	General safety instructions	12
5.1	Operator's duty of care.....	12
5.2	Operator's duties	12
5.3	Basic safety measures	13
5.4	Requirements of operating personnel	14
6	Transport	15
6.1	Transport inspection.....	15
6.1	Disposal of the packaging materials.....	15
7	Installation and Assembly	16
7.1	Environmental conditions for assembly	16
7.2	Assembly lifting platform	17
7.3	Assembly instruction	18
8	Operating	20
8.1	Description of Control Elements	20
8.2	Working on the lifted vehicle	21
8.3	Commissioning.....	21
8.4	Operating HLS1200-DUO	22
	Use of the lifting platform:	22
	Lifting the platform:	22
	Lowering the lift platform:	23
8.5	Safety catch	25

8.6	End of work	26
9	Troubleshooting	27
9.1	Possible problems and their resolutions.....	27
10	Maintenance	28
10.1	Air bags characteristics and durability	29
10.2	Notice about filter regulator and air line.....	29
10.3	Notice about the sliding area of the scissors	29
10.4	Lubrication and test points	30
11	Safety Inspection	31
11.1	Regular safety check.....	32
12	Disassembly and Disposal.....	33
12.1	Disassembly.....	33
12.2	Disposal	33
13	Additional information	34

OPERATION AND SAFETY INSPECTION

1 Operation and Safety Inspection

Carried out by the manufacturer to check the following details:

Following plates present:

- ☐ Nameplate
- ☐ Operating instructions (abbreviated)
- ☐ Lifting capacity
- ☐ Bar main pressure
- ☐ Raise "up", lower "down"
- ☐ Company logo
- ☐ CE marking

Operation and safety checked:

- ☐ **Safety valve set to 3.5 bar operating pressure**

Inspected:

- ☐ Unladed function test
- ☐ Safety catch function
- ☐ Function telescoping support
- ☐ The control valve automatically goes into the 0 position
- ☐ No damage to the surface of the air bags
- ☐ Secure fit of all supporting screws
- ☐ Safeguard of the scissor pins
- ☐ Condition of the pneumatic lines (proper position and do not leak)
- ☐ Function loading ramps / roll-off protection
- ☐ Function slider
- ☐ Function folding ramp
- ☐ Function swivel arm

Serial No.: See cover sheet

Date: _____

Name: _____

Herkules Hebetchnik GmbH
Miramstraße 68b
D - 34123 Kassel
Tel.: +49 (0) 561/58907-0
Fax: +49 (0) 561/58907-34

2 General information

The operating instructions (and test log book) contain important information concerning the installation, and ensure safe, proper, and economical operation as well as preservation of operational safety.

Observance of these operating instructions will help you to avoid danger, reduce repair costs and downtime as well as to increase the life of your service lift.

As evidence of regular **safety checks** this test log book contains a form. This should be used to provide documented details of tests. (It is advisable to make a copy of the form before starting to fill it out.)

Installation and testing

Safety-related work and safety inspections may only be performed by suitably trained personnel. In this documentation, personnel are designated as expert and qualified persons.

2.1 Hazard warnings

To identify hazardous areas and important information, the following symbols with the described definitions are used. Please pay special attention to text sections marked with these symbols.



Signifies danger for life and limb, meaning improper execution of the process referred to by the symbol may be fatal!



Signifies a notification of a key function or an important notice!

2.2 Limitation of liability

All details and indications in this operating manual were compiled taking into account the applicable standards and regulations, and the latest technology as well as our many years of insight and experience.

The manufacturer accepts no liability for any damage caused by:

- Failure to adhere to the operating manual
- Improper use
- The intervention of non-qualified staff
- Arbitrary alterations
- Neglecting maintenance

GENERAL INFORMATION

2.3 Copyright

These operating instructions are to be treated as confidential and are solely intended for personnel working with the machinery. Transfer of the operating manual to third parties without the written consent of the manufacturer is prohibited.



Text, drawings, images and other illustrations are copyrighted and intellectual property rights apply.

2.4 Terms of guarantee

The terms of guarantee are included as a separate document in the sales brochures.

2.5 Customer Service

For technical information, please contact our customer service center as follows:

**Customer
Service:**

Herkules Hebetchnik GmbH
Miramstraße 68b
D – 34123 Kassel
Tel.: +49 (0)561 58907-70
Fax: +49 (0)561 58907-34
Email: info.de@hedson.com

3 Product description

3.1 Intended use

The lift is exclusively intended for lifting vehicles (passenger cars) with a maximum nominal load (**see chapter on Technical data**).

Lifting individuals and other objects is prohibited.

Working under a lifted vehicle and during the lifting and lowering movement is not permitted.

Operation may only be performed by persons who have read and understood the operations manual and who are more than 18 years of age.

Vehicles may only be lifted at the designed lifting points (at framework or on the wheels). It is only allowed to lift vehicles as stated in the operating instructions.

The scope of intended use also includes the reading of the current operating manual as well as compliance with all the indications included in the same – particularly safety instructions.

The scope also extends to ensuring that all inspection and maintenance operations are implemented within the prescribed time periods.

If the vehicle lift system is not used according to its intended use, safe operation of the system cannot be guaranteed.

In the event of any accident resulting in personal injury or damage to property resulting from improper use, the operator of the lifting system shall be responsible and not the manufacturer!

PRODUCT DESCRIPTION

3.2 Product structure


The vehicle lift consists of a pneumatically operated platform main body on one hand and of a cantilever set on the other hand lifting the vehicle directly by the wheels. Alternatively the vehicle can also be lifted with the wheel-free function.

The air bag performs an axial stroke movement that is carried out laterally by the scissors. The scissors also restrict the lift height of the service lift. A safety catch prevents the service lift from sinking in the case of deflation.

The operation of the service lift ensues with an operating unit that is connected to the lift via two pneumatic tubes (air bags / safety catch).

Technical data about the service lift is available in **the Technical data Chapter**.

You will find reference to professional assembly in the **Mounting Chapter**.

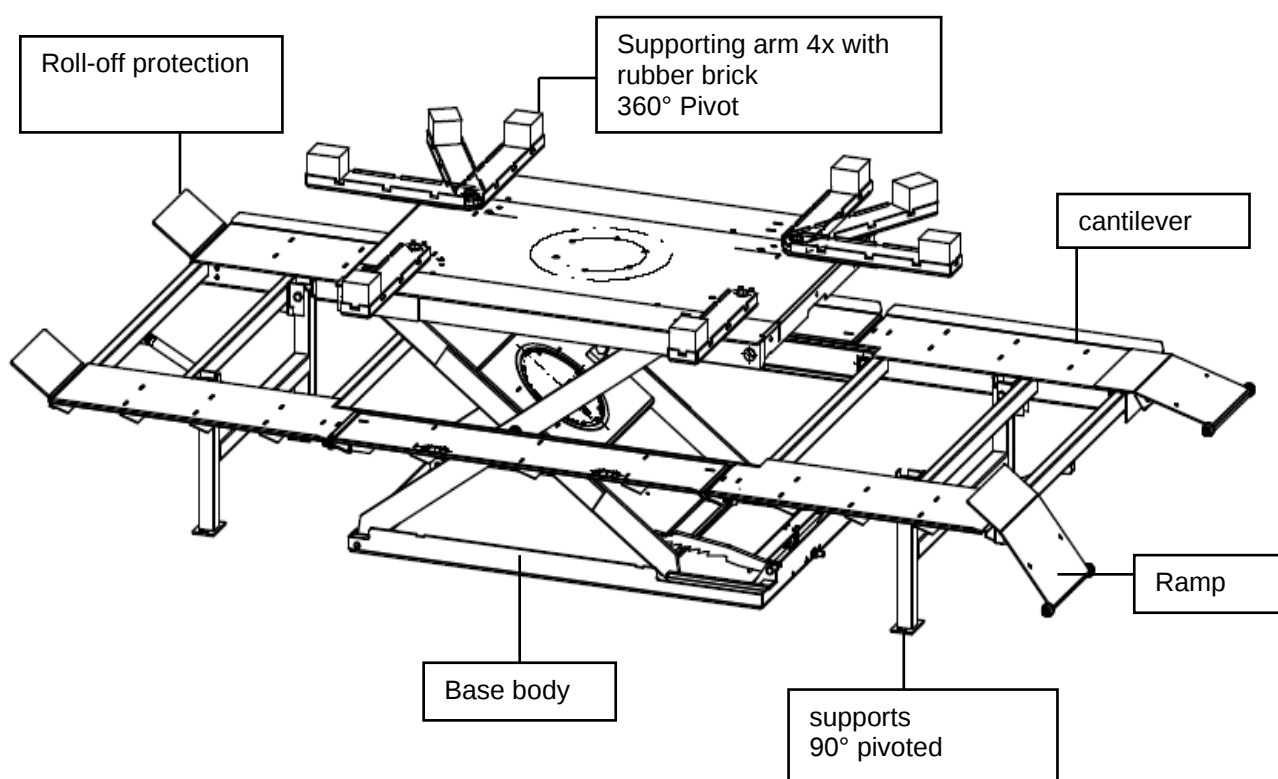

3.3 Technical Data

Technical changes reserved.	HLS1200-DUO-17 HLS1200-DUO-18
Lifting capacity of the service lift	2500 kg
Maximum load distribution	3:2 in- or against driving direction
Empty weight of the service lift	850 kg
Lifting time of the service lift	25 sec.
Lowering time of the service lift	30 sec.
Effective stroke of the service lift	825 mm
Heights of the service lift with arms.	930 + 50 mm
Insertion height minimum/ overhead height	105+5 mm 50 mm
Length of the base body	1660 mm
Width of the base body	1100 mm
Total length	3545 mm
Total width	1900 mm
Distance support points arm max. in the width direction.	1625 mm
Gear	pneumatic (2 Air Bellows)
Operating pressure for the safety valve	3,5 bar
Pneumatic connection to supply system P_{max}	8 bar (by customer)
Noise pollution under	< 70 dB(A)
Pneumatic circuit diagram	TA 1208-DUO-108-3 BL2
Pneumatics spare parts	TA 1208-DUO-108-3 BL1
Safety	
Anti-drop safety device	Yes
Safety valve	Yes
Roll-off safety device (vehicle)	Yes

3.4 Product designation

The details of the lifting platform are stated on the type plate on the machine frame as well as in the CE Declaration of conformity.

Details
Nameplate

Article No.		Year of construction	
Machine type		Operating pressure	
Serial No.		Vers.	
Lifting capacity		Empty weight	

CE DECLARATION OF CONFORMITY

4 CE Declaration of Conformity

set out in Annex II A of the EC Machinery Directive (2006/42/EC)

The manufacturer	Herkules Hebetchnik GmbH Miramstraße 68b 34123 Kassel			
	Herkules Hebetchnik GmbH			
is responsible for the documentation and declares that the following machine described,	the service lift	Machine- Type K 1200-HLS-DUO-17 K 1200-HLS-DUO-18	Art- No. HLS1200-DUO-17 HLS1200-DUO-18	Serial- No. See cover sheet
complies with the Health and Safety requirements of the following EC directives:	EC machinery directive 2006/42/EG			

Applicable harmonized standards:

EN 1493 EN 292; EN 294; EN 349	Vehicle lifting platform Safety of machinery; safety distances
-----------------------------------	---

EC type examination	Test certificate no.
K1200HLS-XX	44 205 12 021010
Testing laboratory	TÜV Nord Cert GmbH

5 General safety instructions

5.1 Operator's duty of care

The lifting platform was designed and built taking a hazard assessment into account and following careful selection of the harmonized standards to be met, as well as additional technical specifications. It thus corresponds to the state of the art and guarantees the utmost level of safety.

However, this safety level can only be reached during practical operation, when all measures required have been implemented. The Due diligence is required on the part of the operator of the lifting platform, to plan these measures and ensure their implementation.

The operator must, in particular, ensure that

- The lifting platform is only used as intended (**see chapter on Product description**).
- The services lift is only be used in a fully functional and fault-free state and will be checked regularly for operational functionality with special attention to safety equipment.
- The placement of the service lift is located and designed so that the operator is able to observe all movements of the load as well as have an overview of the area under the lift and its load. The operator is responsible for supplying adequate lighting.
- Access to the danger area (area under the lifting platform and under the load) by individuals is forbidden. Operations in the danger area are prohibited. Maintenance operations are excluded, (**see Chapter on Maintenance**).
- The operating instructions are to remain fully readable and available in the area in which the lifting platform is used.
- The lifting platform is only used by individuals having read and understood the operating instructions.
- Personnel are to be regularly instructed of all relevant information regarding work safety and environmental protection and familiar with the operating instructions and the safety notices therein.
- Only qualified individuals and experts may repair the lifting platform.
- None of the safety and warning notices linked to the lifting platform are to be removed and must remain readable.
- No interference with the service lift (for example, repairs) should take place without adhering adequately to protective measures (safeguard the base from sinking with a service support).

5.2 Operator's duties

The operating safety ordinances are intended for the operators of work equipment used in vulnerable areas.

The operator must take a risk assessment of the area where the work equipment (service lift) will be used. The dangers that arise during the use of the work equipment related to the substances and working environment should be detected and taken into account.

The operator shall take the measures necessary and choose operating equipment suitable for the conditions prevailing at the workplace and assure the safety and health of employees.

For the execution of risk assessment and decision on suitable equipment, the operator must apply country-specific guidelines and standards.

5.3 Basic safety measures



When operating the service lift, the statutory accident prevention regulations in accordance with BGV A1 (General requirements) apply. Regulations BGR 500 (operators of work equipment) can be used for information purposes.



Make sure that the front wheels are in the straight-ahead position. Before lifting, prevent the vehicle from rolling away. Pull the hand brake and shift the car into reverse or first gear. For vehicles with automatic transmission shift the car into the P position.



The operator is to monitor the vehicle during lowering and lifting.



Service lift parts such as air bags or air bags must be protected while working with high temperatures (welding, grinding, etc.) and from mechanical and chemical damage.

Compliance with the following points is particularly emphasised:

- The service lift is only to be used for lifting passenger cars.
- The total weight of the lifted car may not exceed the stipulated lifting capacity, whereby a maximum load distribution of 3:2 in the driving direction or 2:3 against the driving direction is permitted.
- While operating the service lift, instructions in the operator's manual are to be complied with.
- Only persons who are 18 years old or older and instructed in the use of the service lift are permitted to use it.
- During lifting and lowering movements, no person other than the operator may stand in the way of the area of movement for loading and service lift.
- The transport of passengers on the service lift or in the car being lifted is prohibited.
- Climbing on the service lift or in the car being lifted is prohibited.
- In the event of modifications (i.e. repairs) appropriate safety measures must be met. (Safeguard the base from sinking with a service support.)
- Sufficient clearance between low lying vehicle parts and the service lift should be ensured before lifting begins.
- The rubber blocks have to be placed onto the biggest plain space. Stacking is not allowed



Not complying with the safety regulations can cause serious injuries as well as damage to the lifted vehicle.

5.4 Requirements of operating personnel

The lifting platform must only be used by individuals who have been suitably trained, instructed and authorized. These persons must be familiar with the operating manual and proceed in accordance with the same. The respective authorizations of the operating personnel are to be clarified.

Moreover, for the following activities, specific qualifications are required:

Operation	Execution
Installation	Herkules service assemblyman / qualified person
Starting up	Herkules service assemblyman / qualified person
Briefing	Herkules service assemblyman / qualified person
Fault clearance	Herkules service assemblyman / qualified person
Servicing	Herkules service assemblyman / qualified person
Maintenance	Herkules service assemblyman / qualified person
Repairs	Herkules service assemblyman
Disassembly	Herkules service assemblyman / qualified person

Operating individuals in training should only operate the lifting platform when supervised by an experienced person. Evidence of completed and successful training should be confirmed in writing.

All control and safety installations must, generally speaking, only be operated by suitably trained persons.

All individuals engaging in activities involving the lifting platform must read the operating instructions and sign to confirm that they have understood them.

6 Transport

6.1 Transport inspection

Check the order upon receipt of delivery for damages caused during transport.
If there is identifiable damage, proceed as follows:

- Leave the goods and packaging in an unchanged state. Do not attempt to use the product.
- Immediately contact Herkules customer service.

**Customer
Service:**

Herkules Hebetchnik GmbH
Miramstraße 68b
D – 34123 Kassel
Tel.: +49 (0)561 58907-70
Fax: +49 (0)561 58907-34
Email: info.de@hedson.com



Do not send back damaged goods before receiving confirmation from the customer service center!

6.1 Disposal of the packaging materials

The packaging material must be disposed of in accordance with the current environmental - and disposal guidelines.

7 Installation and Assembly

The following important safety instructions must be observed during the assembly of the service lift. Adhering to safety instructions helps to avoid life-threatening injuries, personal damages, as well as damage to machinery.

- The installation work must only be performed by suitably-trained persons and with compliance of the safety instructions during the process.
- Before commencing the installation work, the lifting platform must be investigated for damage in transit.
- Always ensure that only authorized persons enter the working space and that no other persons are exposed to any risk from the installation work.
- All machine connections (tubes) are laid out so that there is no risk of stumbling.
- Also read the **Chapter General Safety Instructions**.

7.1 Environmental conditions for assembly

The service lift is only suitable for use in dry, closed, indoor rooms.

The ground where the car lift is to be assembled should be horizontal and flat (according to DIN 18202), and the load capacity of the floor must be able to support the total weight of the service lift.

The operator is solely responsible for the selection of the installation location.

The service lift must only be used within a temperature range of 5°C to 65°C. During the selection of the assembly location bear in mind the measurements of the service lift that are outlined in the **chapter on Technical data** as well as the **chapter on Additional information** (take note of the measurements with a lifted vehicle as well).

Adequate ceiling height must be present (at least the total height of the service lift plus the vehicle height). Care must be taken that the minimum distances specified are adhered to (according to country-specific regulations and workplace ordinances) with regard to distance between walls and equipment respectively. It should be noted that the service lift must not block any emergency escape routes. Adequate lighting must be present at the assembly site (according to country-specific regulations and workplace ordinances).

A compressed air supply R1/2" of 8 bar mains pressure must be available at the service lift assembly location.



Care must be taken in selecting the assembly location so that the operator has an unobstructed view of the service lift and the car being lifted.



Only use dehumidified, non-lubricated compressed air! A filter regulator must only be installed in the mains connection (air filter and water separator)!

7.2 Assembly lifting platform

The service lift is only suitable for use in dry, closed, indoor rooms.

The ground where the car lift is to be assembled should be horizontal and flat (according to DIN 18202), and the load capacity of the floor must be able to support the total weight of the service lift. The operator is solely responsible for the selection of the installation location.

The service lift must only be used within a temperature range of 5°C to 65°C. During the selection of the assembly location bear in mind the measurements of the service lift that are outlined in the **chapter on Technical data** as well as the **chapter on Additional information** (take note of the measurements with a lifted vehicle as well).

Adequate ceiling height must be present (at least the total height of the service lift plus the vehicle height). Care must be taken that the minimum distances specified are adhered to (according to country-specific regulations and workplace ordinances) with regard to distance between walls and equipment respectively. It should be noted that the service lift must not block any emergency escape routes. Adequate lighting must be present at the assembly site (according to country-specific regulations and workplace ordinances).

A compressed air supply R1/2" of 8 bar mains pressure must be available at the service lift assembly location.



Care must be taken in selecting the assembly location so that the operator has an unobstructed view of the service lift and the car being lifted.



Only use dehumidified, non-lubricated compressed air! A filter regulator must only be installed in the mains connection (air filter and water separator)!

7.3 Assembly instruction



Install roll-off protection / side-stop and ramp (Note driving direction). **(K1200-DUO-17)**
Execute after lift installation.

Install roll-off protection / side-stop **K1200-DUO-17 /-18**

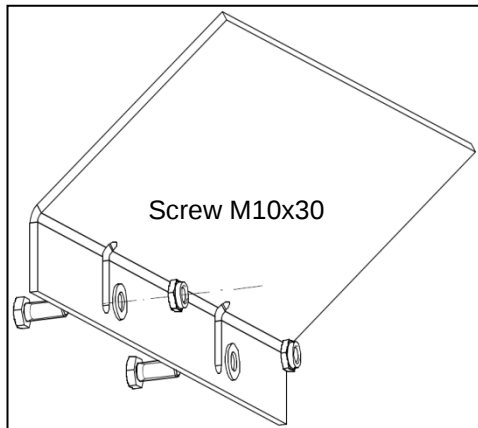


Diagram 2: Roll-off protection




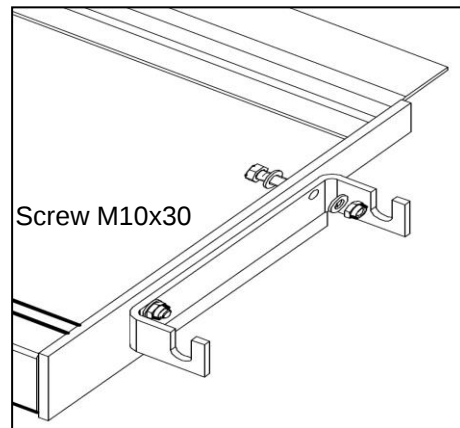


Diagram 3: Ramp


No	HLS1200-DUO	Description	Material Requirements
		Install roll-off protection / side-stop (Note driving direction).	2x plate roll-off protection 4x hexagon screw M10x30 4x nut M10 8x ring washer 10.5mm
		- Mount ramp holders / running side (Note driving direction). - Mount loading ramps	2x plate ramp holders 4x hexagon screw M10x30 4x nut M10 8x ring washer 10.5mm 2x loading Ramps
		- Mount interim carriageways. - Tilt up interim carriageway. - Mount carrying arms	2x folding ramp 4x carrying arm

Unlock the supports and grafter

INSTALLATION AND ASSEMBLY

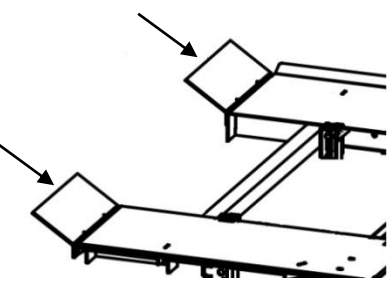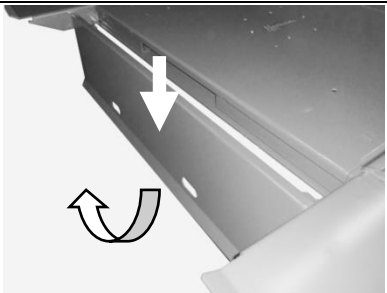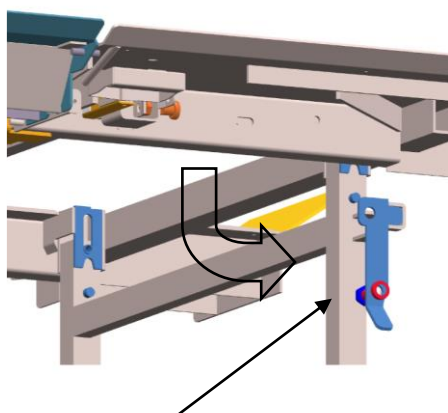

Lever to fold out of the supports

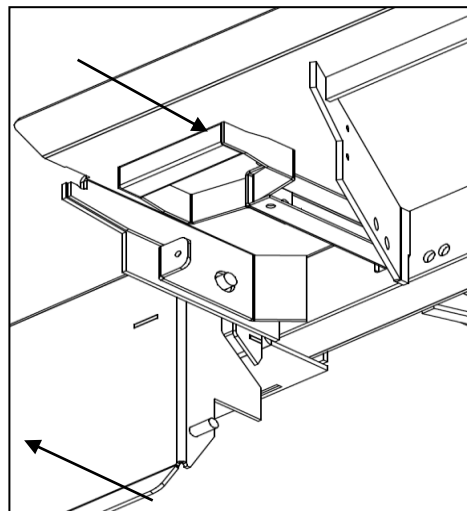

	• Put lifting platform in lower-most position (Operator control module: Open stopcock / hand-operated lever in the switch position "DOWN"). • Insert locking lever (on both sides)	Important: For function description see Chapter Operation.
--	---	---

Unlock the grafter

	• Put lifting platform in lower-most position (operator control module: Open stopcock / hand-operated lever in the switch position "DOWN"). • Insert locking lever (on both sides)	Important: For function description see Operation Chapter.
--	---	---

8 Operating

It is essential that the following safety instructions are followed while operating the service lift and the guidelines in the Chapter on **General safety instructions** is observed. Adhering to safety instructions helps to avoid life-threatening injuries, personal damages, as well as damage to machinery.

The lifting platform may only be used / deployed in accordance with its intended use. Please ensure that you are aware of what to do in the case of an accident or emergency before using the lifting platform.



Individuals working with the lifting platform must wear safety shoes and be familiar with the operating instructions.

8.1 Description of Control Elements

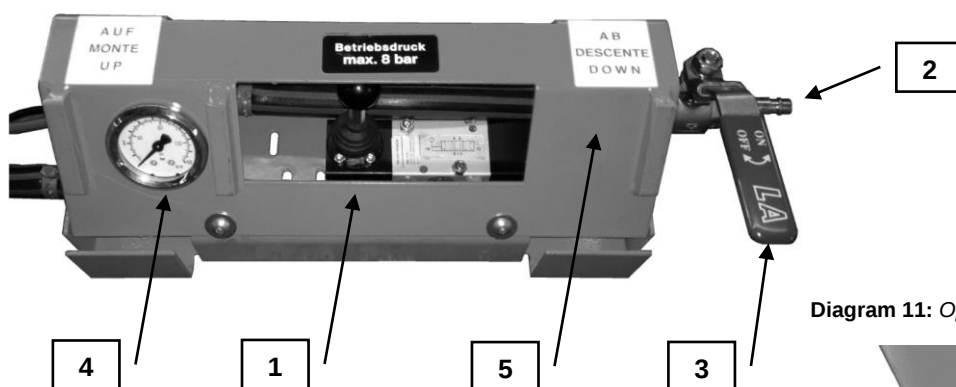


Diagram 11: Operation Unit

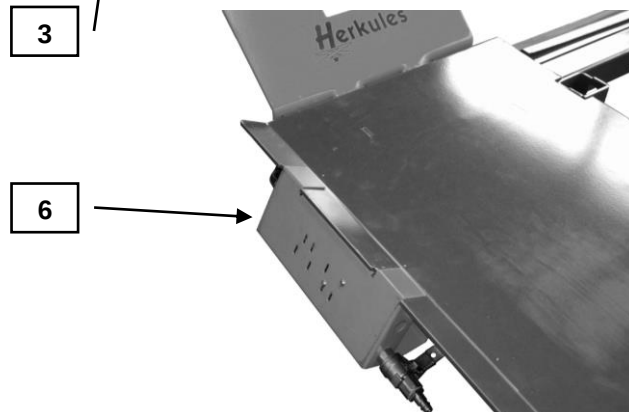


Diagram 12: Operation Unit in home position

No.	Description	Additional information
1	hand lever	
2	connector for compressed air supply	NW 7,2
3	main isolation (incl. locking point)	padlock not included
4	pressure gauge	air bags pressure display (max. 3.5 bar)
5	protection frame	
6	operation unit in home position	

The service lift is actuated with either the hand lever valve or the foot pedal. The control valve has three settings (with relevant markings): lift, 0-position, and lower. A stable framework protects the control valve. The pressure gauge shows the amount of pressure in the air bags.

8.2 Working on the lifted vehicle

- Follow the legal regulations for the prevention of industrial accidents.
- Make sure that no one is in the space under the lifted vehicle.
- It is not allowed to put spare parts or tools on the lifted vehicle or lifting platform.
- Pay attention to the shift of the center of gravity when installing or dismantling heavy parts to or from the vehicle.
- Respect the weight shifting when install or dismantle heavy parts. Thereby the vehicle can tilt over the lifting platform.

8.3 Commissioning

Read the following functional checklist before using the service lift:

- Make sure that no persons or objects are present in the area of operation of the service lift.
- Secure the compressed air supply.
- Open the main tap on the operating control unit.
- Confirm that the operating control unit switch is in the lifting position - 'lift' until the service lift reaches the upper end limit.
- Confirm that the operating control unit switch is in the lowering position - 'lower' until the service lift reaches the lower end limit.
- Repeat lifting and lowering movements several times without load.
- The safety catch should lock into place at the end of each lift movement or in the intermediate position on both sides in the gear teeth.

Observe the operating instructions for the respective work places on the service lift. Only the operating personnel may stand in the vicinity of the service lift while in use.

Also read the **Chapter General Safety Instructions**.

8.4 Operating HLS1200-DUO



The safety guidelines in the **chapter "General safety instructions"** should be carefully read before operating and must be strictly adhered to during operation.

Operating HLS1200-DUO-17 / -18


Use of the lifting platform:

- Be sure that the lifting platform is completely retracted. .
- Load the service lift with a vehicle over the ramps.
- Make sure that the vehicle is centered in both length- and width-wise on the platform.
- Secure the vehicle from rolling away by engaging the hand brake and shifting into gear.

Lifting the platform:

- Ensure that the vehicle is securely on the lift platform.
- Make certain that the lift platform can be safely raised.
- Proceed with lifting until the desired height is achieved. After the desired height is achieved, put the gear lever into the 0 position (neutral). The lift platform remains at this height. After releasing the gear lever, the lever automatically returns to the 0 position (neutral) and lifting ceases. Lifting automatically stops once the maximal lift height is achieved.

Diagram 13:
*Vehicle lifted over
Wheels*

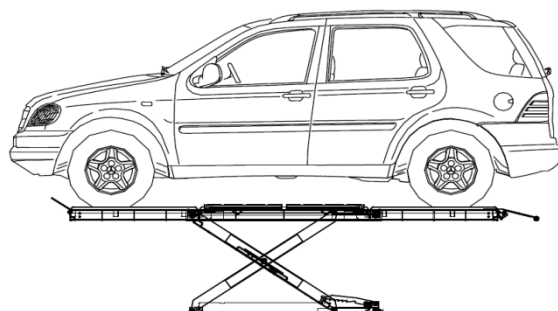


Care must be taken during lifting, that the safety catch is securely engaged in the gear teeth on each side after each lifting movement (especially between movements smaller than the lift max.) This is noticeable through a clearly audible "clicking" sound.

Lowering the lift platform:

- Areas subject to danger must be monitored before lowering and no persons or objects may be in the operation area of the service lift before lowering takes place.
- The interim drive over ramps must be raised.
- Switch the gear lever of the operating unit to "Lower".
- Lowering ends when the service lift has returned to its initial position. Stopping the lowering movement is possible at all times by switching the gear lever to the '0' position (neutral). Releasing the gear lever automatically causes the lever to switch back to the '0' position and thus interrupts the lowering movement.

Diagram 14: *Lifting in initial position*





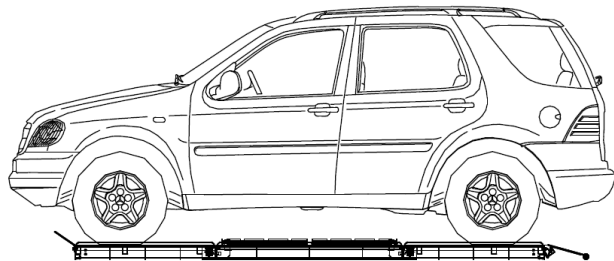


Operator of the wheel-free lift function

The raising of the vehicle can either be on the wheels, or over the wheel-free lift function.



When lifting the vehicle using the wheel-free lift function, the lifting points exclusively specified by each vehicle manufacturer must be used. Failure to do so could result in serious personal injury and damage to the raised vehicle

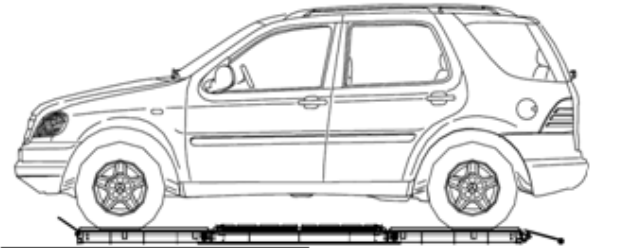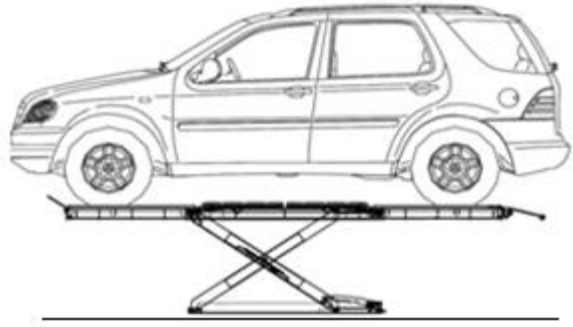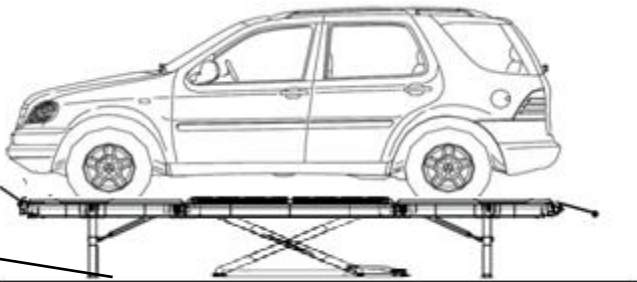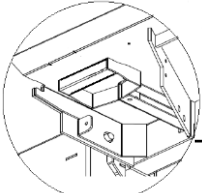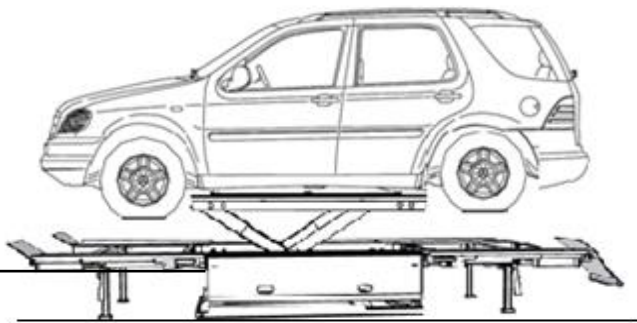• Drive onto lifting platform		
• Raise lifting platform (approx. 500mm)		
• Fold down supports on both sides •  • Lower lifting platform		
• Position fulcrum arms with rubber pads under the car lifting points • Unlock the locking lever on both sides •  • Raise lifting platform		

8.5 Safety catch

- During lifting the safety catch is swiveled down. The catches of the safety catch slide on both sides of the detents of the inner scissoring. After the lifting motion the safety catch should be fully engaged on both sides to ensure safety.


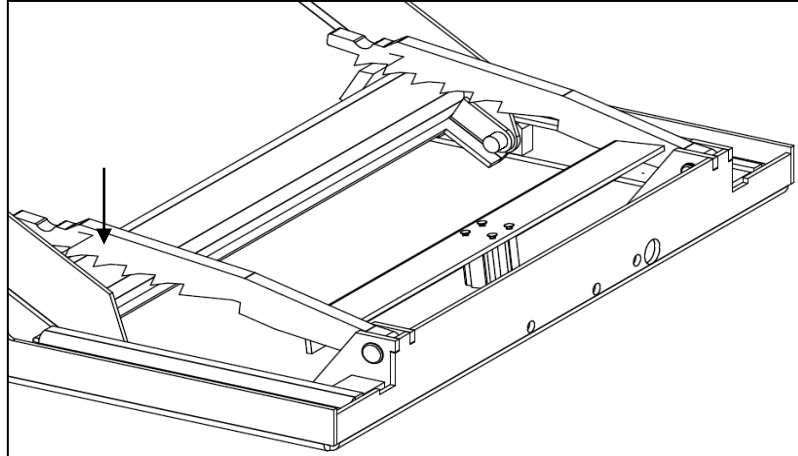


Diagram 14/15: safety catch engaged / safety catch lifted during lowering operation.

- The safety catch is lifted up by means of the cylinder during lowering movement. At the end of the lowering movement or by interruption of the movement, the safety catch automatically drops and thereby grips into the detents of the service lift.

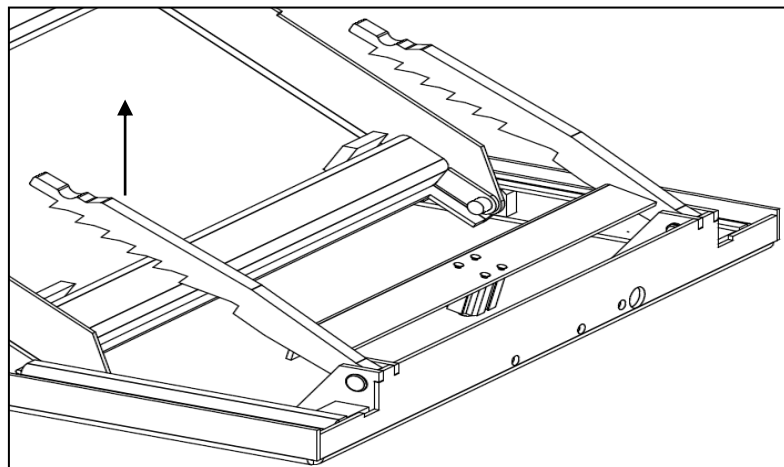

Should the service lift not lower:

In this case briefly lift the service lift until the drop is free. Afterwards repeat the lowering movement.

8.6 End of work

After completing work with the service lift the following points should be adhered to:

- The service platform must be in the lower end limit.
- Close the main tap of the operating control unit.
- Guard the main tap from unauthorized use with a padlock (not included in delivery).

K1200-DUO-17 / K 1200-DUO-18



Padlock



Operating unit outside lift

Requirements of padlocks:

- padlock width: 38-43 mm
- closed shackle height: 28-35 mm
- shackle diameter: max. 6 mm

9 Troubleshooting

To avoid machine damage or life-threatening injuries while resolving faults with the lifting platform, the following points must be observed at all times:

- Only attempt to repair a malfunction if you are suitably qualified to perform such work.
- Protect the service lift from unintentional restart by disabling the compressed air supply.
- Secure the upper frame in the lifted position with a stand or a proper support.
- Also read the **chapter General Safety Instructions**.

9.1 Possible problems and their resolutions

Malfunction	Source of fault	Rectification of errors
Malfunction while lifting	Pressure gauge of the maintenance unit without bar mains pressure.	Make sure there is a mains pressure of $P_{max} = 8$ bar. Open the shut-off valve.
	Hose lines squashed, bent, or damaged.	Check the hose lines and if necessary replace them with new ones.
	Gauge pressure 1 bar above allowable pressure of the safety valve	Check the safety valve for contamination and replace if necessary.
Malfunction while lowering	Lift platform is resting on top of an obstacle	Raise the lift platform, remove the obstacle, and then continue lowering.
	Safety catch engaged	For bar mains pressure $P_{max} = 8$ bar make sure the gear lever is switched to "Lift" until the safety catch is free. Afterwards repeat the lowering movement.



If, despite the above measures, the lifting platform cannot be lifted or lowered, the customer service department must be notified.

Herkules Hebetchnik GmbH
 Miramstraße 68b
 D – 34123 Kassel
 Tel.: +49 (0)561 58907-70
 Fax: +49 (0)561 58907-34
 Email: info.de@hedson.com



When replacing defective parts, always only use original spare parts from the manufacturer.

10 Maintenance

Maintenance work should be carried out at the specified maintenance intervals and only by qualified persons. Neither water nor flammable liquids may be used during the cleaning process.

To ensure durability and continuous operation of the service lift, the following points should be observed:



- Only spare parts from the original manufacturer and suitable tools may be used.
- Regular maintenance intervals must be observed.
- For all maintenance work not outlined or explained in this instruction manual, please contact your supplier or customer service of the manufacturer.

Only perform maintenance when the lift achieves a max. (unloaded), the lift platform is braced with service supports, and the compressed air supply is disabled!

Maintenance intervals	Points to follow	Comments
Monthly Or after approx. 300 lifts	All moveable parts such as pivot bolts, sliding pads, and sliding surfaces should be check for wear and tear, cleaned, and lubricated. Check air bags and air tubes for any damages. Visually inspect and check for leaks. Examine the surface of the air bags for impurities, then clean, and maintain. Inspect valves for functionality and check for leaks. Inspect the maintenance unit (filter regulator, provided by the customer), and consult the product manufacturer's instructions. Check middle pin for secure seating.	Only use lubricants that contain no adhesive-repelling substances in the area to be lubricated.
Yearly Or after approx. 3600 lifts	Regular safety check (In accordance with §10 (2) German Plant Health and Safety regulations)	For test protocol see Chapter Regular safety check.
Replace the safety valve Or after approx. 7200 lifts	After every 2 years of operation.	
Every 6 years of operation Or after approx. 21600 lifts	Replace the complete air hoses.	

MAINTENANCE

10.1 Air bags characteristics and durability

The air bags are a flexible element developed and designed specifically for use in lift platforms. The rubber covering reduces the aging process and should be especially carefully checked.

Tips for a long operating life:

- Use dry as well as non-lubricated compressed air.
- Protect from UV radiation (i.e. through welding or the use of a UV dryer).
- Avoid the use of chemical agents.
- Protect the unit from damage (grooving, etc.).
- Adhere to maintenance and care instructions (see **Chapter Maintenance**).

Damaged air bags must be replaced. Only original parts from the manufacturer are permitted to be used.

10.2 Notice about filter regulator and air line

The filter regulator is not included in the scope of delivery of the lift platform. A filter regulator must be installed in the mains connection (provided by the customer). Only dehumidified, non-lubricated compressed air should be used. Follow maintenance and cleaning of the filter regulator, consult the information and instructions of the filter regulator manufacturer.

10.3 Notice about the sliding area of the scissors

Due to the design principles of the sliding surfaces of the scissors, great force is exerted. This force can lead to scoring on the sliding surfaces. However, the function of the service lift will not be compromised. The maintenance intervals and instructions outlined in the **Chapter Maintenance** are to be observed.

10.4 Lubrication and test points

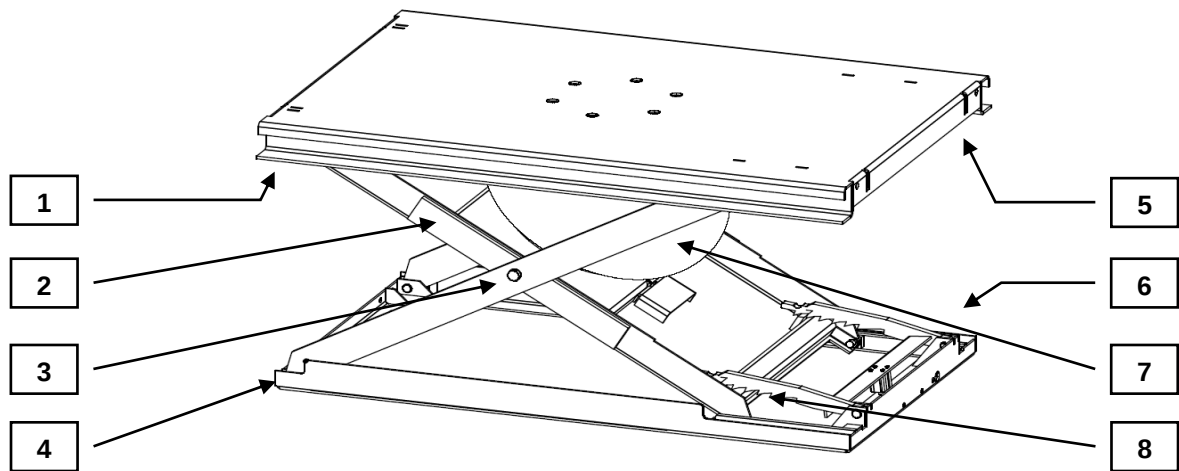


Diagram 8: Lubrication and test points

No.	Description	Lubrication and test points
1	bearing pin overhead (right and left)	- check the safety washers from both of the bearing pins for proper fit. - lubricate bearing pin
2	sliding surfaces of the scissors (right and left)	- check the sliding surfaces of the scissors for wear. - lubricate sliding surfaces
3	scissor pins (right and left)	- check that the scissor pins are properly fixed. - check the safety nuts.
4	bearing pins below (right and left)	- check the safety washers from both of the bearing pins for proper fit. - lubricate bearing pin
5	sliding pads and guide rails above (right and left)	- check sliding pads for damage and wear. - lubricate sliding pads and guide rails.
6	bearing pin safety catch (right and left)	- check the safety washers from both of the bearing pins for proper fit. - lubricate bearing pin
7	air bags	- check air bags for damage. - check the screws on the air bags reinforcement both above and below for proper fit.
8	sliding pads and guide rails below (right and left)	- check sliding pads for damage and wear. - lubricate sliding pads and guide rails.

11 Safety Inspection

Safety inspection is required to guarantee the operational safety of the service lift.

It should be performed:

Should be performed for the first time by the manufacturer, before starting up the lifting platform.

The use of which can be found under the section "operation and safety inspection" (**Chapter operation and safety inspection**).

After the first commissioning, check at regular intervals in accordance to §10 (2) BetrSichV (German Plant Health and Safety Regulations)!

The use of which can be found under the section "regular safety check" (**Chapter regular safety check**).

Document the condition of the service lift in a separate copy and attach it to the operating instructions and inspection log.



Regular safety checks must be performed by a suitably-trained person. It is advisable to also implement maintenance at the same time.

11.1 Regular safety check

(In accordance with §10 (2) German Health and Safety regulations!)

Device type	
Serial number	

Inspection step	OK	Not OK	re-examination	Remark
Nameplate				
Sign with lifting capacity				
Sign with bar mains pressure				
Operating instructions (abbreviated)				
Designation lift - lower				
Secure fit of all supporting screws				
Safeguard of the scissor pins				
Condition of the pneumatic lines				
Safety valve set to 3.5 bar operating pressure				
Pressure gauge bar mains pressure $P_{max} = 8$ bar				
Control lever returns automatically to the '0' position when released				
Safety catch function				
Loading ramps function				
Condition of the air bellows				
Interim drive over ramp function (only HLS1200-DUO-17)				
Condition of the supporting structure				
Functionality of the service lift with vehicle				

Inspection result	
	Start-up not permitted, verification required
	Start-up possible, faults to be rectified by:
	No fault, start-up possible immediately

Safety inspection performed on:

Name and address of qualified personnel

.....
Signature of competent person

.....
Signature of operator

With the required rectification of faults

.....
Signature of competent person

.....
Signature of operator

12 Disassembly and Disposal

12.1 Disassembly

To correctly disassemble the system, perform the steps in the assembly instructions found in **Chapter Assembly instructions** in the reverse order.


The safety regulations in **Chapter General Safety Instructions** must be observed when disassembling the system.

12.2 Disposal

The service lift must be disposed of in accordance with the current environmental and disposal guidelines.

13 Additional information


Spare parts platform-main body K1208-DUO

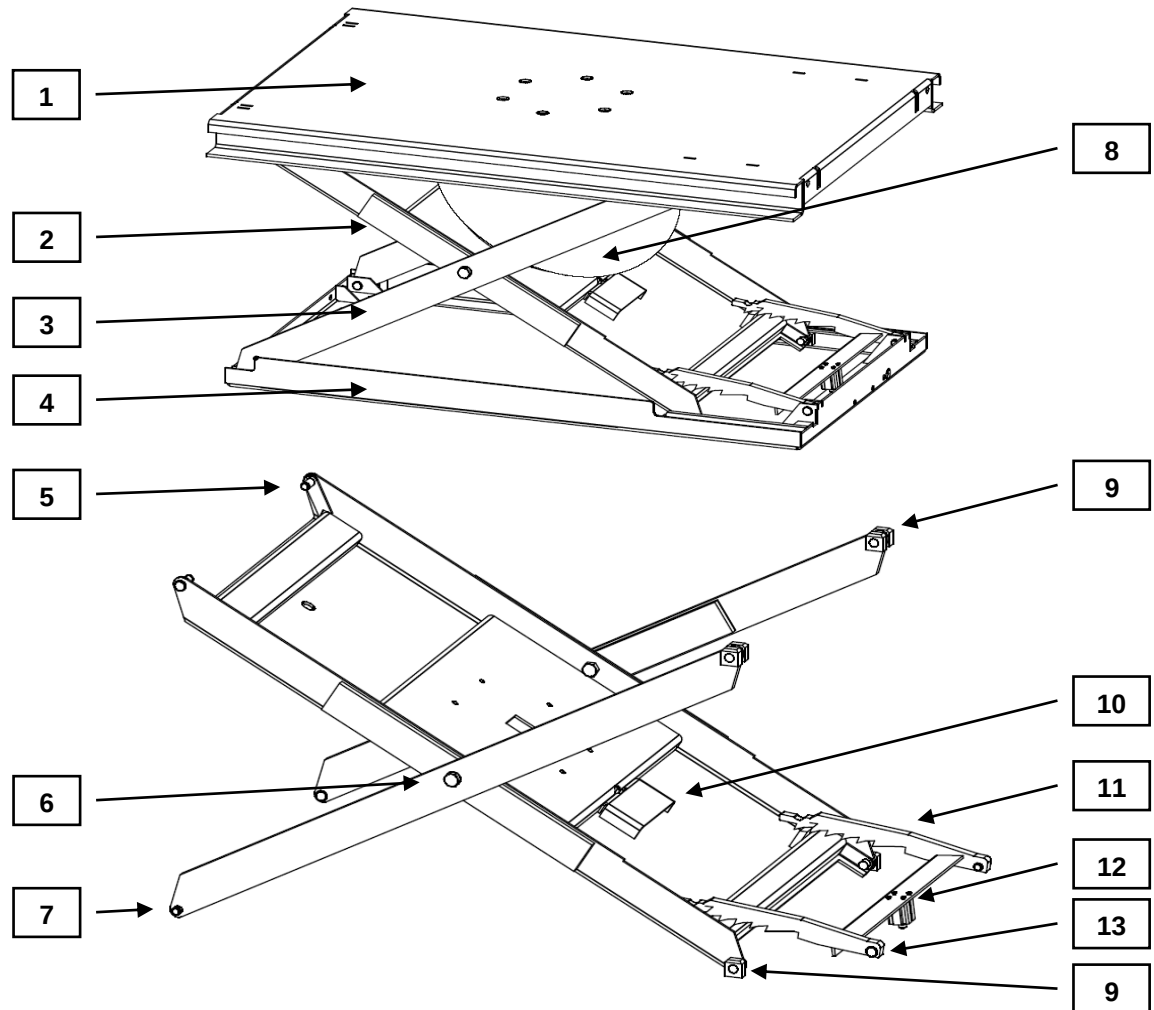

No.	Description	Item number	Quantity
1	Upper frame K1208	15353	1
2	Internal scissor K1208	15357	1
3	Set external scissor K1208	15359 and 15361	2
4	Lower frame K1208	15354	1
5	Thrust bearing bolt (at the top) K1200	690-147	2
6	Middle bolt K1208	500-661-1	2
7	Thrust bearing bolt (below) K1200	690-139	2
8	Double air bag K1208	15733	1
9	Sliding piece	695-000	6
10	Safety valve (set up on 3.5 bar)	700-171	1
11	Anti-drop safety device K1200 / K1208-DUO	15362	1
12	Pneumatic cylinder drop safety	710-124	1
13	Anti-drop safety bold	690-140	2
/	Hose package	3000-0003	1


ADDITIONAL INFORMATION

Compilations K1200-DUO-17

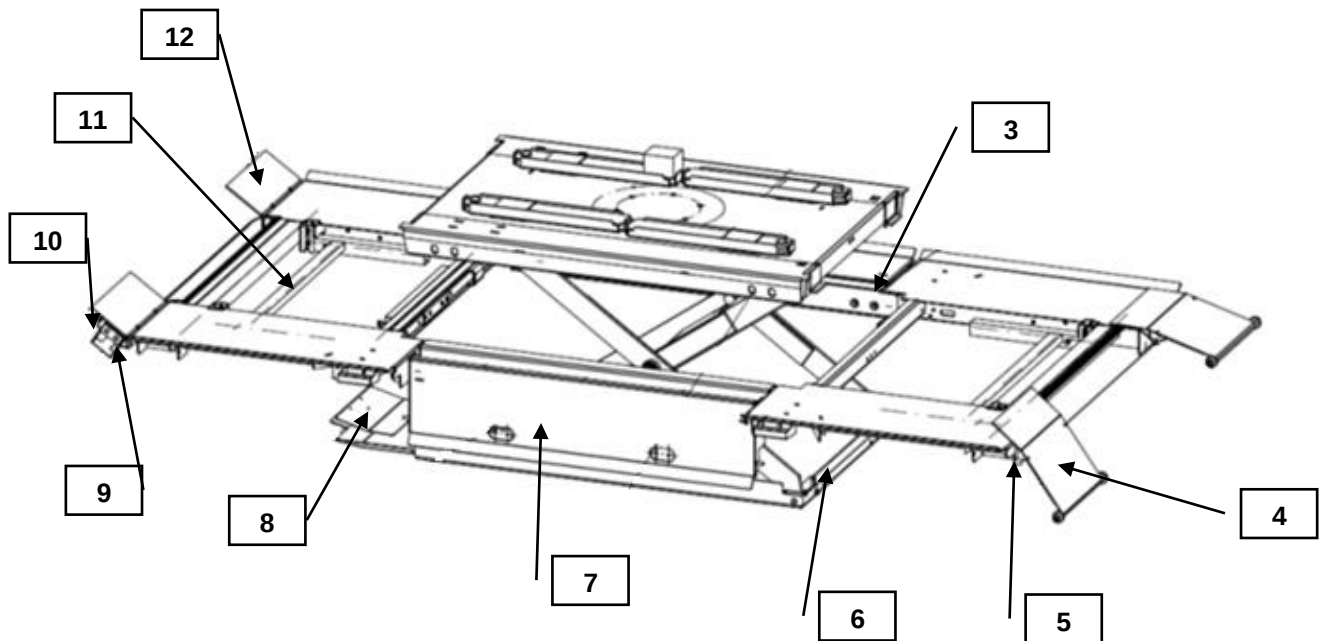


Nr.	Beschreibung	Artikelnummer	Anzahl
1	Platform-main body TA-DUO	GK1208-DUO-TA-EK	1
2	Swivel arm	15509	4
3	Connector	15508	2
4	Ramp	200-299	2
5	Rampconnector	18398	2
6	Stop bar	15751	1
7	Folding ramp	15506	2
8	Valve tray with cover	16310	1
9	Control valve box	15758	1
10	Connector for Roll-off protection		1
11	Cantilever TA 1200-DUO-11	18514	2
12	Roll-off protection	18386	2

Compilation K1200-DUO-18 *

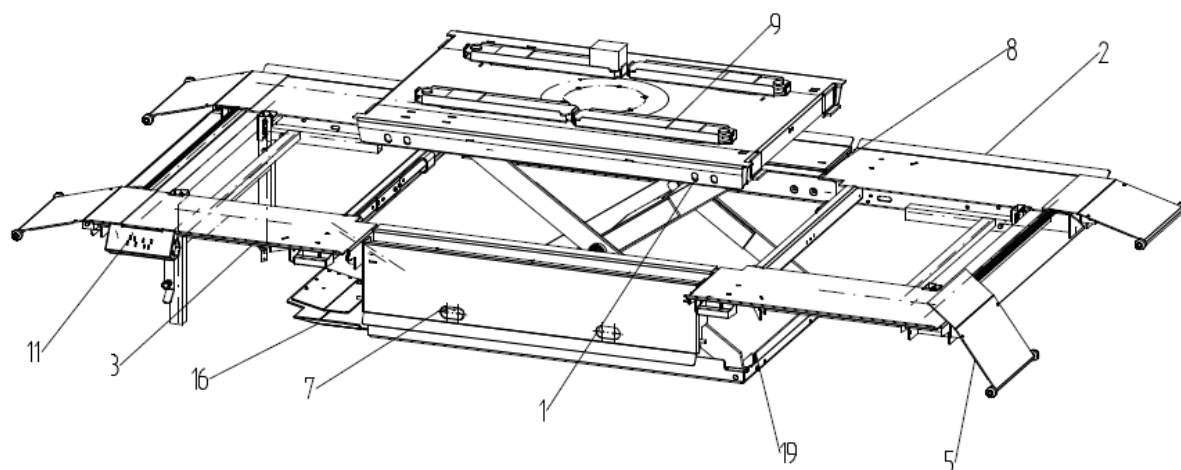

*part list see K1200-DUO-17
 Position 6 Roll off protection not applicable.
 For it Position 5 ramp 4x

Pneumatic K1200-DUO-17 /-18

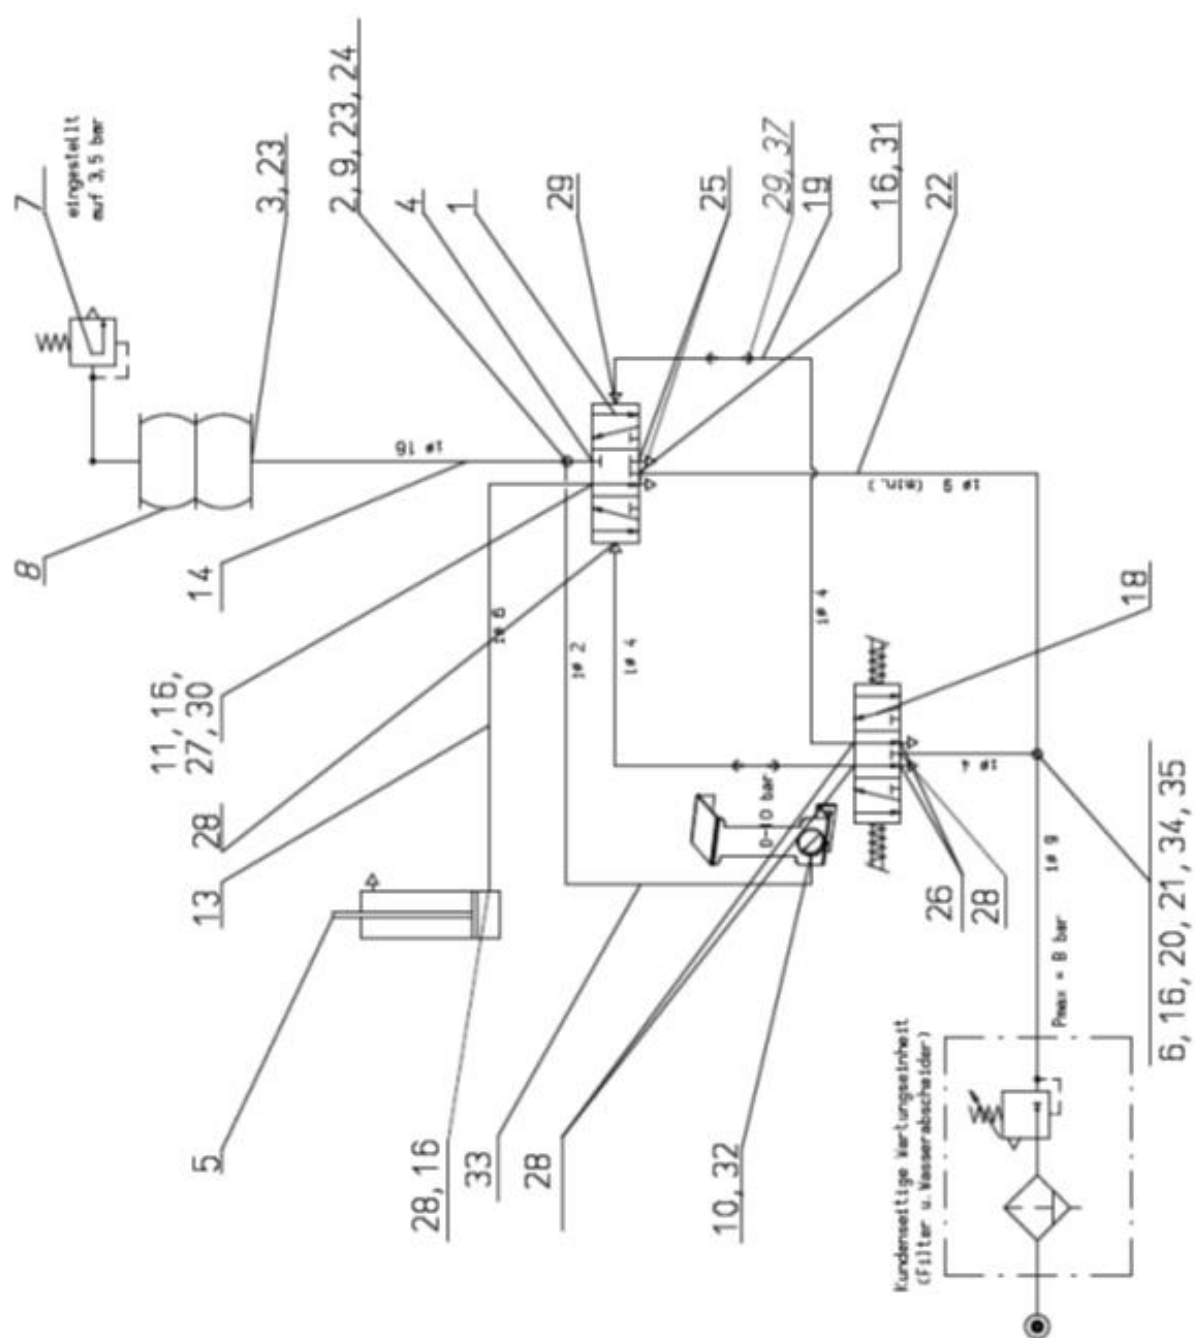

ADDITIONAL INFORMATION

Notice: